

PRODUCT INFORMATION CARD – How to set the RTC on 7.2V Battery (REV 3)



Certified under IECEx ITA 14.0009X Part #: ME5070-2-99-151



Nautitech® 7.2V Battery Pack (Rev 3)

FEATURES AN INTEGRATED REAL-TIME-CLOCK FOR TIME STAMPED EVENT DATA LOGGING WHICH CAN ASSIST WITH ASSET MONITORING AND AUTOMATION

The RTC can be set using a <u>double strength magnetic pen</u> via the configuration panel on the Hawkeye display:

Location of magnetic switches / swipe keys:

The system provides four (4) swipe keys (ENT, UP, DOWN, BACK). The location of the magnetic "switches" for these keys is near the perimeter of the dial as indicated in image below. When a key is swiped, the name of the key appears on the status bar

TO SWIPE: Hover the magnetic pen over a "switch" and swipe it away UP/DOWN: Used to change the selection OR adjust numeric value

ENT: Used to select an option OR adjust next value

BACK: Used to go to previous screen OR adjust previous value

To set the Real-Time-Clock:

- 1. Go to CONFIGURATION PANEL HOME and select "Set Date / Time"
- 2. Set YEAR, MONTH and DAY using **UP** and **DOWN** keys to select correct values
- 3. Swipe **ENT** to highlight the "Set Date & Time"
- 4. Use ENT, UP, DOWN, and BACK keys to set Hours, Minutes and Seconds in 24 hour time format
- 5. Swipe ENT again. Status bar will show "Settings Succeeded" and title bar should read the correct date and time